




MacBook Air 11" Mid 2011 Battery Replacement


Written By: Walter Galan

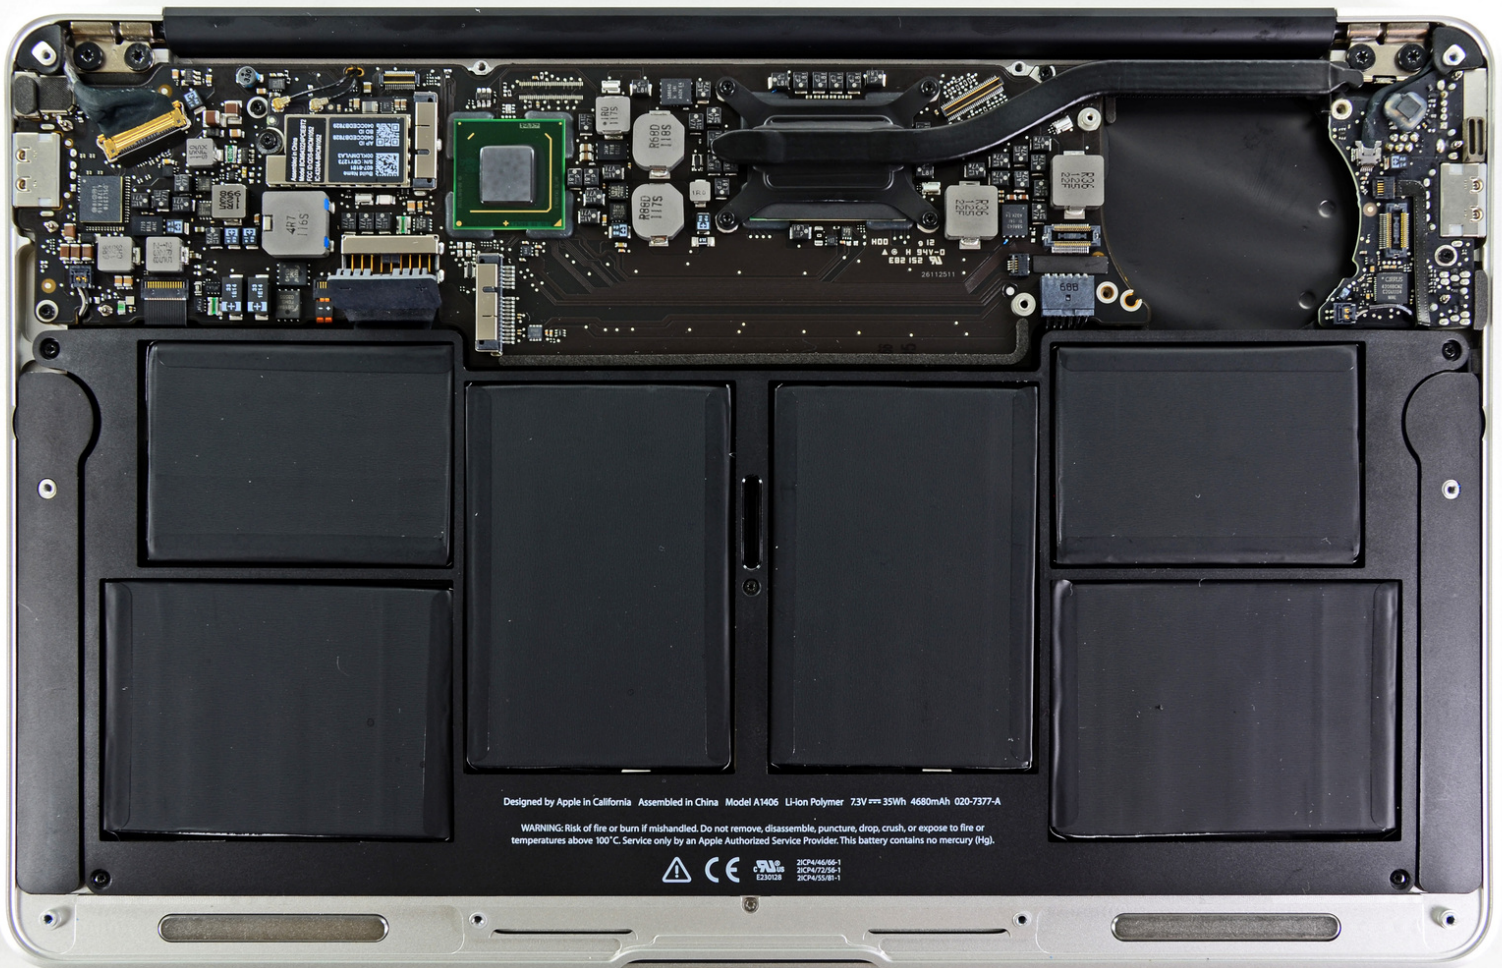

INTRODUCTION


Internal Prereq for battery removal when fan is out.

Step 1 — Battery

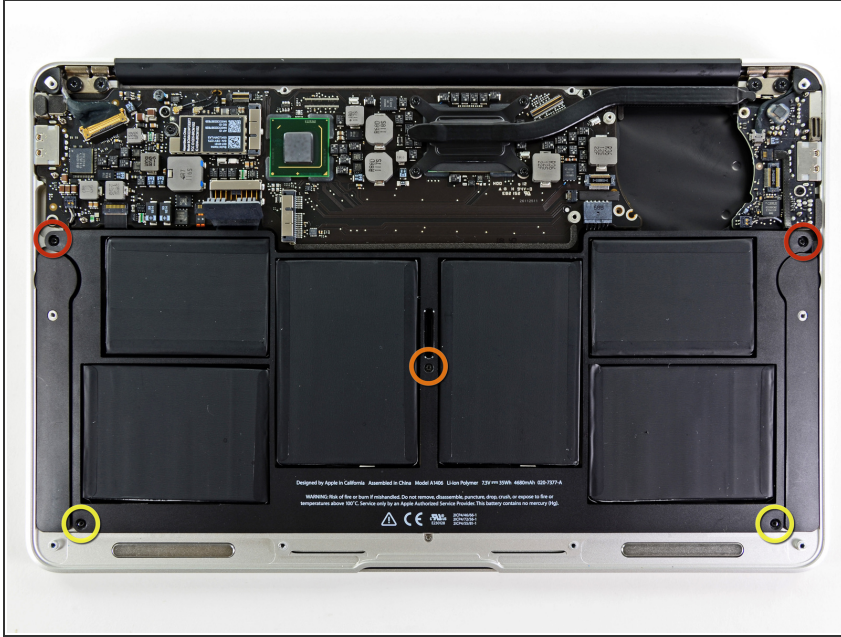

- Remove the following five screws securing the battery to the upper case:
 - Two 5.2 mm T5 Torx screws
 - One 6 mm T5 Torx screw
 - Two 2.6 mm T5 Torx screws

Step 2

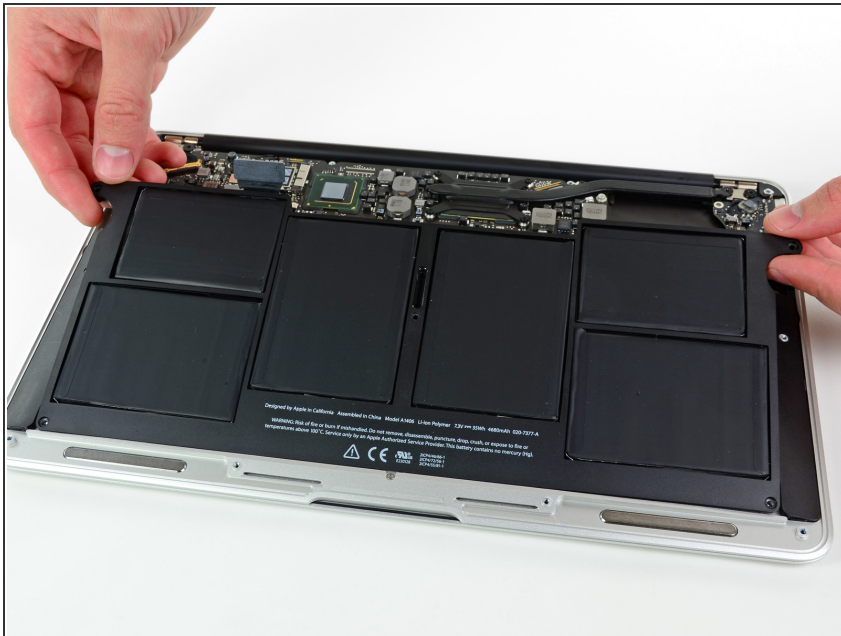

- ⚠ Do not touch or squeeze the six lithium polymer cells when handling the battery.
- Lift the battery from its edge nearest the logic board and remove it from the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 09:25:11 PM.